Set Up Instructions

OneFabric 10ft Straight Display


Step 1: Carefully remove frame and graphic from nylon bag.

Step 2: Ensure "adjustable feet" of frame are on the floor. Pull up display into upright position.

Step 3: Lock all hooks between front and back hubs.

Step 4: If supplied with fabric end caps, wrap Velcro fabric edges around all end cap brackets on both sides. Pull past edge if needed to make taut.



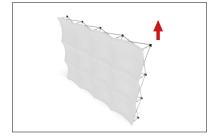





WARNING BEFORE COLLAPSING THE FRAME:

Step 1: Both graphic end caps must be detached from end cap brackets before collapsing frame.

Step 2: **To avoid damage to the frame**, all hooks must be unhooked and separated from each other.

Once this is done the frame should begin to collapse under its own weight without much effort.





LIGHTS:

(OPTIONAL) Attach lights to top of frame by sliding the plastic "x block" under the rear pole and over the front pole.

